


Splash

TRAIL+

User Manual


Contents:

Getting Started	3
Waterproof & Dustproof Performance	14
Specifications	15
Troubleshooting	16
Contact Support	18
Warnings	19
FCC Information	22
Warranty Information	24

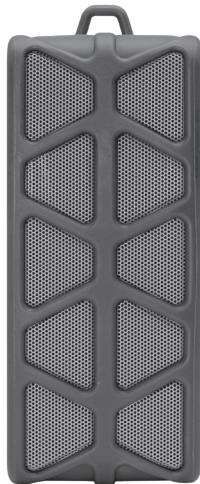

GETTING STARTED

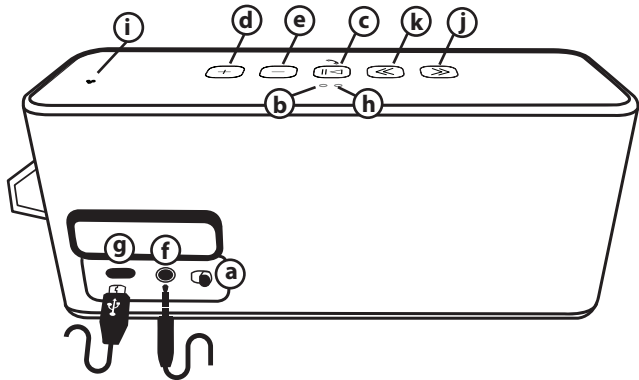

- (a)** On/Off Switch
- (b)** Charging Indicator
- (c)** Action Button
- (d)** Volume Up
- (e)** Volume Down
- (f)** 3.5mm AUX-IN
- (g)** Micro-USB Charging Port
- (h)** Status Light
- (i)** Built-in Microphone
- (j)** Previous Track
- (k)** Next Track





In the Box

- NUU Splash Trail Plus
- Micro USB power charging cable
- 3.5mm to 3.5mm audio cable
- User Manual

a) On/Off Switch

On: Slide the switch  to the left  to turn the NUU Splash on. When powered on, the Splash says “Power On!” to indicate this.

Off: Slide the switch  to the right  to turn the NUU Splash off. When powered off.

NOTE: Do not flip the power switch on/off rapidly. Wait for the sound before moving the switch again.

Bluetooth Status Light

b) This is a small light above the Action Button  that illuminates to show the current status of the Splash’s Bluetooth connection.

- **(Blue)Flashing Slowly:** The Splash is on and is not in pairing mode. This is also the indicator for “auto-reconnect”, where the Splash attempts to connect with the last paired Bluetooth device immediately after it is powered on.
- **(Blue)Flashing Quickly:** Pairing mode (you will hear the word “Waiting for connection” from the Splash)
- **(Blue)Solidly Lit:** Paired and connected.

- **(Green)Flashing Slowly:** FM Mode active.
- **(Green)Flashing Quickly:** FM automatic channel scan in progress.
- **(Green)Solidly Lit:** Line-in mode active.

Ⓒ Action Button

The Action button  controls:

- Switching Modes
- Play/Pause
- FM auto-scanning
- Re-connect
- Bluetooth pairing
- Mute/Unmute

TO SWITCH BETWEEN BLUETOOTH, FM, AND LINE-IN MODES:

Every time you power on your Splash, it starts in Bluetooth mode. Use the Action button to switch to FM and Line-in modes.

1. Power on the Splash


2. Wait for the Splash to fully enter Bluetooth mode. You will hear either “Bluetooth connected” if you previously connected a phone to your Splash, OR you will hear “Waiting for connection” if you did not. When you hear one of those phrases, you may go to step #3.
3. Press and **HOLD** the Action button to switch to the next mode in sequence
4. After switching to a new mode, you must release and then press and **HOLD** the Action button to go to the next mode
5. You will hear “Radio” when the Splash switches to FM Radio mode
6. You will hear “Line-in” when the Splash switches to Line-in mode
7. You will hear “Bluetooth” when the Splash switches to Bluetooth mode

TO SCAN FOR FM STATIONS:

1. Switch to FM Radio mode as above. You will hear either static or an FM station
2. Adjust the volume as needed, using the volume +/- buttons

3. Click the Action button  one time. The Splash will then scan the FM band for stations it can receive

TO START BLUETOOTH PAIRING:

1. Power on the Splash
2. The Splash will say "Power On", then "Bluetooth", and "Waiting for connection"
3. When you hear "Waiting for connection", the Splash is in pairing mode and can be found by nearby devices
4. If your Splash is already paired with a device and you want to pair it to a different device, double-click the Action button . You will hear "Waiting for connection" as in Step #3

TO PAIR THE SPLASH WITH YOUR BLUETOOTH DEVICE:

1. Enter Bluetooth pairing mode as above
2. Enable Bluetooth on your phone or other device, then select "NUU Splash" from the list of discoverable devices

3. If prompted for a PIN code, enter “0000” (4 zeros)
4. It will take between 10-15 seconds for the Splash to pair with your device. When pairing is successful, you will hear the Splash say “Bluetooth connected!” and the Bluetooth status light will remain steadily lit

NOTE: Procedures for activating Bluetooth will vary across devices. Consult the documentation that came with your phone or other device for further information.

PLAY/PAUSE (in Bluetooth mode):

While paired, the Action button controls the play/pause functions. Click the Action button once to pause, click it again to resume playback.

RECONNECT (in Bluetooth mode):

If the Splash was previously paired with a device but has not reconnected to that device, you can click the Action button once to start a re-connection attempt. Usually this is not necessary, but you may need to do this if your device goes out of range of the Splash and comes back into range later.

MUTE (in Line-in mode):

While in Line-in mode, clicking the Action button once mutes the sound. Clicking it again un-mutes the sound.

- d** Volume Up (+) **e** Volume Down (-)

CONTROLLING VOLUME

Press or **hold** the volume keys (-) / (+) to adjust the volume. When you reach maximum volume, the Splash will say “Maximum volume!”. There is no voice prompt for minimum volume.

f 3.5mm AUX-IN – Plug & Play


The Splash can connect to any device with a 3.5mm headphone jack. Use the supplied 3.5mm input cable to plug and play, no Bluetooth required. You must first switch to Line-in mode in order to hear playback.

NOTE: Accessories supplied do not meet waterproof and dustproof specifications.

g) Micro-USB Charging Port

CHARGING THE SPLASH'S BATTERY:

For best results, ensure the Splash is fully charged before use.

Connect the supplied Micro-USB cable into the charging port , and plug the USB side into your computer or a USB AC adapter (adapter not supplied). The red charging indicator will remain illuminated while the Splash is charging. The indicator will go dark when the unit is fully charged. The indicator flashes red when the battery is low. Allow 2.5 hours for the battery to fully charge. The Splash may be used while it is charging.

NOTE: If you intend to use the Splash while charging, audio output quality may suffer during playback while charging via computer.

h) Charging Indicator

A flashing red light indicates that the battery is low and should be recharged soon. When charging, this light shows red until the Splash is fully charged, at which point it goes dark.


Built-in Microphone – Making and Taking Calls

The Splash may be used as a wireless speakerphone when paired with your phone via Bluetooth. Use your phone to dial as usual, and speak toward the built-in microphone located at the top of the unit. The built-in microphone only works when your phone/device is connected via Bluetooth.

Incoming and outgoing calls are given priority over all audio playback (Bluetooth, FM, and Line-in). When a call comes in, playback will pause. Playback will resume once the call has ended and the Splash switches back to the mode it was in (if not in Bluetooth mode).

Action Button : Click the Action button to answer an incoming call. Click it again to disconnect the call.

Next Track : Press and **HOLD** to dial the last outgoing phone number again.

Previous Track : During a call, press and **HOLD** to switch the call between the Splash and your phone. When an incoming call is ringing, press and **HOLD** to send the call to voicemail.

j Previous Track <<

k Next Track >>

When you are streaming audio via Bluetooth, you may press the >> button to skip forward to the next track in your playlist. Press the << button to skip back to the previous track in your playlist, or to the beginning of your current track.

Listening to the FM Radio:

The Splash Trail+ comes with an integrated FM antenna that allows it to pick up FM radio stations. This antenna is inside the Splash and there is no external antenna port or the like; this is so you can seal up the Splash and still have an FM radio that's waterproof. To use the FM radio:

1. Place the Splash where you want it to be
2. Switch to FM mode as above
3. Click the Action button one time to make the Splash scan for available FM stations. This will take about a minute or two, depending on how many can be received clearly
4. The Splash is done scanning for stations when it stays on one station

5. Use the Previous/Next Track buttons to switch between stations that showed up clearly during the scan in Step #2

EXAMPLE: While scanning for stations, the Splash turns up stations A, B, and C. Starting on station A, pressing the Next Track button would switch the Splash to station B, and pressing it again would then switch it to station C. Pressing one more time would cycle back around to station A.

You may need to reorient or reposition the Splash to improve reception. Use the auto-scan feature after moving the Splash in order to refresh the list of stations it can receive.

USB SPEAKER MODE:

The Splash can be used as a USB speaker when connected to your computer's USB port. Once connected, you may control playback with the Action button and Prev/Next Track buttons. You must adjust the volume on the computer and the Splash separately.

If the Splash does not automatically connect, you may have to manually select Splash as your output device. Consult your computer's documentation to learn how to do so.

Ensure the Splash is fully charged before using as a USB speaker. Your computer's USB port may not be able to supply enough power to charge and play music at the same time.

WATERPROOF & DUSTPROOF PERFORMANCE

The Splash is designed to be waterproof and dustproof. Damage caused from misuse, abuse or failure to properly maintain the Splash is not covered by the limited warranty.

- The Splash is IP57 certified and will operate at a water depth of 3 feet for up to 30 minutes.
- Use the Splash in the recommended operating water temperature range of -10°C to $+40^{\circ}\text{C}$ (14°F to 104°F). Do not use in hot springs.
- As for dustproof performance, there is no guarantee that the Splash will not become scratched or dented.
- Accessories supplied do not meet waterproof and dustproof specifications.

NOTES BEFORE USING SPLASH UNDER/NEAR WATER

- Always confirm that the cover over the charging and AUX-IN port has been securely sealed. Splash will only meet IP57 standards when cover has been securely closed. To securely close the cover, follow these steps:

1. Firmly seat the inside edge of the cover in place
 2. Using both thumbs, press down at both ends of the cover at the same time to ensure it is in place, flush, and sealed
- If dirt or sand gets on the power charging port(s), wipe the area clean with a soft cloth that will not leave behind any fibers.
 - Do not open or close the charging port cover with wet or sandy hands or near water.
 - Make sure the Splash is completely dry before opening the charging port cover.

SPECIFICATIONS - *Design and specifications are subjected to change without notice.*

- IP57 waterproof & dustproof rating
- Pairs with any Bluetooth 2.0 device
- 3.5mm AUX-IN
- 2 x 3W audio output power
- Built-in FM radio
- 1 x Passive bass radiator
- 2 x 40 mm 4 ohm speaker driver
- Up to 10 hours of playback time
- A2DP profile
- 10m Bluetooth range
- Dimensions: 6.75" x 2.3" x 2.75"
- Weight: 1 lbs
- USB Speaker

IP57 Definition:

Solid particle protection level 5 - Ingress of dust is not entirely prevented, but it must not enter in sufficient quantity to interfere with the satisfactory operation of the equipment; complete protection against contact.

Liquid ingress protection level 7 - Ingress of water in harmful quantity shall not be possible when the enclosure is immersed in water under defined conditions of pressure and time (up to 3 feet of submersion for 30 minutes).

Drop Testing - NUU Splash drop testing meets or exceeds 1M drop test standards.

TROUBLESHOOTING

- **Unable to pair with your Bluetooth device?**
 1. Ensure that your phone/device is Bluetooth compatible, and that Bluetooth has been correctly enabled on your device. (Check the documentation that came with your phone/device for further instructions).
 2. Ensure that your phone/device is within a few feet the NUU Splash.

3. If your phone/device is connected to a number of other Bluetooth devices, disconnect some of them before pairing with the NUU Splash.
4. Turn Bluetooth off and then on again on your phone/device. If the NUU Splash still won't pair, remove it from the list of discoverable devices and retry the pairing process from the start.
5. Ensure that both devices are sufficiently charged.

- **Problems with the sound?**

1. For sound distortion, try lowering the volume on the NUU Splash and/or your phone/device.
2. Move the NUU Splash closer to your phone/device.
3. Connect your phone/device to the NUU Splash via the 3.5mm input cable rather than Bluetooth. Ensure that the cable is fully inserted at both ends.
4. Ensure that both devices are sufficiently charged.

- **NUU Splash not responding to commands such as volume change, play/pause, pair, etc.?**
 1. Switch the NUU Splash off and then on again.
 2. If there is still no response after step 1, connect the unit to the supplied power adapter and repeat step 1.
 3. Check that your phone or other device is sufficiently charged.

CONTACT SUPPORT

We want to help solve whatever issues you may encounter when using your NUU Splash. If at any time you are not satisfied or have questions, please call or e-mail our dedicated customer support specialists and they will be more than happy to assist you.

For further technical support and information, please visit gonuu.com/support or

US Customer Support

CALL: Noetic, Inc.

507-529-1441

8am - 4:30pm (CT) M-F

E-MAIL: Noetic, Inc.

support@noeticinc.com

e-mails will be answered within 1 business day

WARNINGS

Read all instructions and warnings before using this product to ensure your personal safety and prevent property damage.

- The cover over the charging and AUX-IN port **MUST** be closed in order for the NUU Splash to be waterproof. Press firmly on the cover to ensure it is closed and sealed.
- The NUU Splash has a water resistance rating of IP57 - ingress of water in harmful quantity shall not be possible when the enclosure is immersed in water under defined conditions of pressure and time (up to 3 feet of submersion for 30 minutes). Do not expose the product to more than 3 feet of water or for longer than 30 minutes.

- Do not expose this product to fire or other sources of excessive heat.
- Do not leave this product in direct sunlight for extended periods of time.
- Do not block any ventilation openings.
- Do not disassemble this product or attempt to modify it in any manner. Unauthorized alterations may compromise safety, regulatory compliance, product performance, and will void the warranty
- Do not expose this product to excessive impact or other physical abuse. Do not insert anything into this product unless otherwise specified in the user manual.
- Do not use abrasive cleaners on this product. Wipe it with a soft, water-dampened cloth.
- Only charge the battery in accordance with the user manual supplied. Use only the manufacturer supplied charger. Using other chargers could result in electric shock and/or damage the NUU Splash. Using other chargers will void the warranty.

- Do not charge the NUU Splash in damp areas or in extremely high or low temperatures, as this could result in electric shock.
- Do not attempt to replace the product's built-in battery. Attempts to disassemble the unit or replace internal battery will void the warranty.
- Obey all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Do not place the NUU Splash on high surfaces. During music playback, the product may move or shift, causing it to fall.
- Do not dispose of the NUU Splash in a fire. The battery could explode causing injury or death.
- Dispose of the NUU Splash with its battery in accordance with local regulations. Do not dispose of the NUU Splash with regular household waste.

FCC INFORMATION

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

FCC RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY INFORMATION

Limited One Year Warranty Information

NUU Limited (hereafter referred to as NUU), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owner's manual from our website for reference or contact the authorized local distributor (information of the authorized distributors are listed on www.gonuu.com). Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, NUU will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. The product must include proof of purchase, including date of purchase. To obtain the Warranty Service, Customer must contact the authorized local distributor within the applicable warranty period to obtain warranty service authorization. Dated proof of original purchase from the authorized reseller will be required. NUU is not responsible for Customer's products or parts received without a warranty service authorization. Products or parts shipped by Customer to local distributor must be sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package.

THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT DULY SIGNED BY NUU WARRANTIES EXCLUSIVE. IF THIS PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPLACEMENT OR REPAIR OF THE PRODUCT OR PART OR REFUND OF THE PURCHASE PRICE PAID, AT NUU. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES (OR CONDITIONS), EXPRESSED OR IMPLIED, INCLUDING (WITHOUT LIMITATION), ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE. NUU SHALL NOT BE LIABLE FOR LOSS OF PROFITS OR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHICH THE PURCHASER MAY SUSTAIN. IN NO EVENT SHALL NUU'S

LIABILITY EXCEED THE PURCHASE PRICE OF THE DEFECTIVE PRODUCT. NUU NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. NUU SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR, OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OTHER HAZARDS, OR ACTS OF GOD. THIS WARRANTY DOES NOT COVER PHYSICAL DAMAGE TO THE SURFACE OF THE PRODUCT, INCLUDING CRACKS OR SCRATCHES ON OUTSIDE CASING. THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM THE USE OF THIS PRODUCT IN CONJUNCTION WITH ACCESSORIES, OTHER PRODUCTS, OR ANCILLARY OR PERIPHERAL EQUIPMENT AND NUU DETERMINES THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF. THIS WARRANTY DOES NOT APPLY TO ANY MALFUNCTION OR FAILURE OF THE PRODUCT OR PART DUE TO ANY COMMUNICATION SERVICE CUSTOMER MAY SUBSCRIBE TO OR USE WITH THE PRODUCT. WARRANTY IS VOID IF THE WARRANTY STICKER IS REMOVED.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, NUU ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THIS PRODUCT, EVEN IF NUU OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPLACEMENT, REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT NUU'S DISCRETION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HERE-IN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Disclaimer: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

NUU Service Center

3111 19th Street NW, Rochester, MN 55901-6606 USA



gonuu.com



www.facebook.com/nuubrand



www.twitter.com/go_nuu

Made in China

© 2015 NUU. ALL RIGHTS RESERVED

The Bluetooth word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.